

Command line entries/Grid setting/Snap setting

The “ENTER” key on the keyboard will pass you through settings on the command line. If you wish to type in a new value, the new setting will be registered by pressing the enter key. All entries on the command line are in decimal units.

```
Move To 3.5625, 3.6875
Command:setzdpth, Z cut depth <0.1250 inch>: .250
Command:
```

The “GRID” is a pattern of dots on the screen that assist you in seeing the position and size of screen objects. Keyboard entry changes the size of the grid.



```
- <toggle|enter>
- <toggle|enter>
Spacing < ON 1.0000 inch >:
```

Command line shows the grid is now set for a one inch spacing. Accept or type new value. Press “ENTER”.


The “SETGRID” Command turns the grid on or off.

```
Grid Flag OFF - <toggle|enter>
Grid Flag ON - <toggle|enter>
Command:
```

Press the space bar to toggle the grid on or off. Press enter to set.



The “SNAP” setting causes the green crosshair to move in increments of set units. For example, a value of one sixteenth inch will only allow lines to be drawn on 1/16 inch intervals. Set any value you want on the command line. Settings are in decimal units.

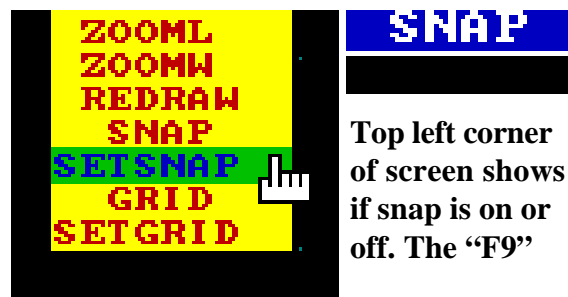

Top left corner of screen shows if snap is on or off. The “F9”