



Pan/Move/Copy

The pan command is a viewing assist. Using pan is like moving a large drawing around on a table so the part that interests you, is in your work area. Select a point near the edge of the screen by clicking. Then move the crosshair to the center of the screen and click.

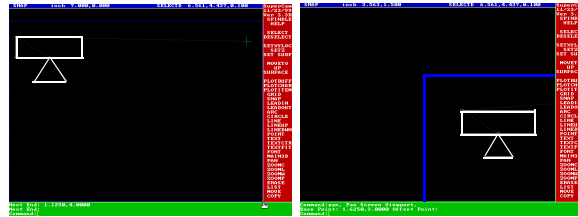


Notice that when you pan, you can be looking beyond the machine limits.

The move command makes it possible to move objects around on the screen and also, to bring objects that are outside the machine limits, into the work area. Note that the F5 key must be toggled “ON” to drag objects.

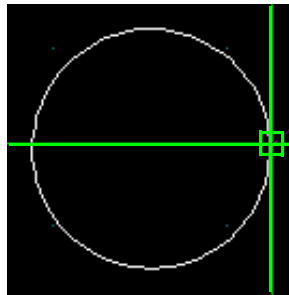

The crosshair will have a square displayed. You must place the crosshair over a line in the object to select it.

The lines in the object will turn red when you click the left mouse button. You may not get it the first time. Move the crosshair slightly and click again until the lines turn red. Right click the mouse to end the selection. The command line asks for a base point. Click in the center of the object and drag it to where you want to locate it. Left click to set the object in place.

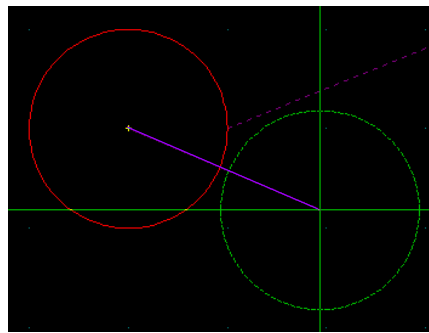

The copy command works much like the move command. Select the item with the crosshair and left click. End the selection by right clicking. Click in the object to select the base point. Move the crosshair to the point you want the object copied to, and left

