


Ortho/Tool display/Clear buffer/Command line and mouse buttons



The “ORTHO” command only allows lines to be drawn vertically or horizontally. It assures lines will be drawn “true”.

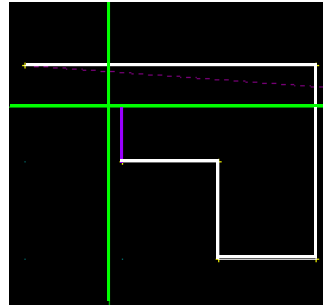

ORTHO

“F8” will toggle the ortho feature on or off.

The light blue crosshair represents the position of the cutting device on your machine. It remains blue when traveling and turns red when cutting.

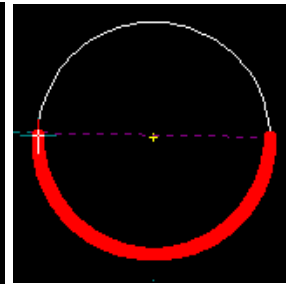

“SHIFT F2” toggles the display of the tool movement on or off. Refresh the screen with F1.

When you draw on the screen, the lines are temporary, and will be lost unless saved with a file name. You can play with making lines, circles, arcs etc. To erase the the whole screen and start over you clear the buffer.



Respond to the command line with a “yes” by clicking the right mouse button.

Limits
Clear Drawing Buffer! <N!Y>

The command line often asks for a “yes” or “no” as in the illustration above. The position of the “N” and the “Y” on the command line indicates which mouse button to use.

<N!Y>

LEFT MOUSE
BUTTON

RIGHT MOUSE
BUTTON